≈ SENNHEISER Service


MKH 110



Ersatzteile - Spare parts

Pos.	Bezeichnung	Designation	Bestell-Nr. Part-No.
1	Senkschraube M 1,4 x 2 DIN 963	Countersunk screw M 1.4 x 2 DIN 963	22407
2	Gehäuse, komplett	Housing, complete	34829
3	Flanschbuchse	Flange socket	10527
4	Kondensatorkapsel	Condenser capsule	12968
R 8	Widerstand, 68 Ohm	Resistor, 68 Ohms	23676
R 4	Widerstand, 392 Ohm	Resistor, 392 Ohms	23739
R 5	Widerstand, 1,2 kOhm	Resistor, 1.2 kOhms	23785
R 6	Widerstand, 1,5 kOhm	Resistor, 1.5 kOhms	23792
R 2	Widerstand, 221 kOhm	Resistor, 221 kOhms	23947
C 9	Kondensator, 22 pF, 50 V	Capacitor, 22 pF, 50 V	28109
Cl	Kondensator, 180 pF, 50 V	Capacitor, 180 pF, 50 V	25498
C 3	Kondensator, 220 pF, 50 V	Capacitor, 220 pF, 50 V	24222
C4, C6	Kondensator, 1,5 nF, 50 V	Capacitor, 1.5 nF, 50 V	24291
C 11	Kondensator, 3,3 nF, 50 V	Capacitor, 3.3 nF, 50 V	24315
C5, C8, C 12	Kondensator, 8,2 nF, 50 V	Capacitor, 8.2 nF, 50 V	25677
C 7	Kondensator, 22 nF, 50 V	Capacitor, 22 nF, 50 V	19016
D1, D2	Diode 1 N 4151 - nur Thomson	Diode I N 4151 - only Thomson	23562
T1, T2	Transistor BC 560 B	Transistor BC 560 B	23463
Drl,Dr2	Festinduktivität 39 µH	Fixed inductance 39 µH	23582
L 1	HF-Spule	RF-coil	13668
∟ 2	Kreisspule	Circuit coil	13667
Q	Quarz	Crystal	23338

Gedruckte Schaltung Printed circuit board

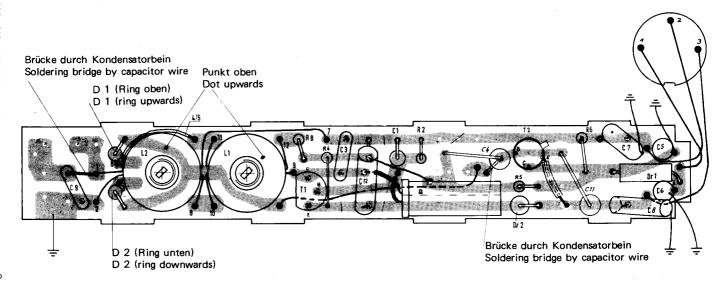



Schaltbild

Circuit diagram

